

# DL-50cc OPERATING INSTRUCTIONS

This engine is designed for use in radio controlled model airplanes only. With its high power output and light weight, it's ideal for your 30% airplane. Read and follow all of the Operating Instructions before you use it.

## **WARNING!!!**

**The DL50 engine is not a toy. Serious injury and even death may result from improper use. You alone are responsible for its safe and proper operation. Valley View RC is not responsible for any injury, damage or other loss resulting from its use. If you do not agree, you must not use the engine.**

## **SPECIFICATIONS:**

### **Performance...**

<b>Output Power:</b>	<b>5.2HP at 7500rpm</b>
<b>Idle Speed:</b>	<b>1350 rpm</b>
<b>Maximum Speed:</b>	<b>9000rpm</b>
<b>Static Thrust:</b>	<b>30lbs at 100 meters altitude</b>

### **Dimensions...**

<b>Displacement:</b>	<b>50.8cc</b>
<b>Bore and Stroke:</b>	<b>43mm×35mm</b>
<b>Compression Ratio:</b>	<b>7.5:1</b>
<b>Weight:</b>	<b>Engine - 1350g Exhaust - 100g Ignition - 120g</b>

### **Requirements...**

<b>Fuel:</b>	<b>2C Regular Gas mixed 30:1 - 45:1 (petroleum based for break in, synthetic thereafter)</b>
<b>Propeller:</b>	<b>22×8; 22×10; 23×8</b>
<b>Ignition Battery:</b>	<b>4.8 to 6.0 Volts &gt;=1200Mah</b>
<b>Replacement Spark plug:</b>	<b>NGK CM6 or equivalent</b>
<b>Gap:</b>	<b>0.018" to 0.020"</b>

### **Configuration...**

<b>2Cycle air cooled</b>
<b>Walbro membrane pump carburetor with manual choke</b>
<b>Automatic advancing electronic ignition</b>

## **SAFETY INSTRUCTIONS**

1 If you are unfamiliar with this type of engine, seek the help of an experienced user. Never operate it alone or without proper knowledge and experience on hand. Always have your club Safety Officer inspect your engine installation, plane and radio set up before attempting to use them. Verify proper ignition, receiver and transmitter battery voltages, and perform a range check before every flight. NEVER attempt to start the engine or fly with radio "glitches" of any kind.

2 Gasoline is highly flammable and hazardous; always have a fully charged fire extinguisher at the ready when using it; always use it with extreme caution and with approved containers and fueling equipment. Never operate your engine indoors or in a closed area.

3 Before every use, check the engine assembly, propeller and airframe carefully for any damage or loose screws, nuts, and bolts. Normal gas engine vibration has a tendency to loosen things up when you least expect it. Never attempt to operate the engine or aircraft if you suspect there might be a problem.

4 Always stand clear of and behind the propeller; never allow anyone including yourself, to be in front of or to the sides of the propeller when starting or running the engine. Anyone near the engine should wear protective eyewear and clothing.

5 Always use a correctly mounted (correct length bolts, no spacers behind it, not touching the spinner cone, etc.), and properly sized propeller. Never use a propeller that has been damaged, modified or repaired or that has not been properly balanced.

6 Always use a heavy duty starter stick or heavy leather work glove to flip the prop. Always have the airframe in a starting stand and have someone else hold the plane when starting or running the engine. Never operate the engine where anything (dirt, gravel, clothing, any loose items) might be drawn into the propeller. Keep spectators at least 50ft. away from your aircraft when operating the engine.

7 Unless you are starting it, never turn the engine over without first making sure the ignition is off. Always use an ignition kill switch and have the throttle setup such that it can be used to stop the engine when necessary.

8 Never mount the engine in anything other than an airframe for which it's designed for use in. Overpowering an airframe is dangerous and unsafe. Do not use an engine stand to run the engine. A stand may not allow engine vibration energy to be properly dissipated and may cause failure of the engine mounting parts, propeller, propeller mounting bolts or stand.

9 Always fly in accordance with the safety rules, regulations and recommendations of the AMA. Read and understand all of the safety material on their website [www.modelaircraft.org](http://www.modelaircraft.org) before using this engine.

## **ENGINE INSTALLATION**

The engine can be mounted with or without the supplied engine mounts and hardware. If you choose to use the mounts, they should be mounted with the closed end to the firewall and the open side to the engine. If additional mounting height is needed, it should be placed between the mount and the firewall. Make sure that all spacing is flat and of the same size and surface plane so as not to induce any twisting force into the mount or damage to the engine, or mount failure may result. Spacing should never be used between the mount and the engine. A "stiffening ring" if used, should be on the inside of the mount tabs rather than between the mount and the engine.

Check to see that the carburetor has adequate clearance (at least 1 in.) to anything for proper breathing. If it doesn't, make appropriate adjustments. Make sure that your airplanes fuel tank and lines are made for gasoline use, that the tank is adequately vented and that the feed line clunk can move freely in all directions and not get hung up anywhere. We recommend using a filter between your gas supply and airplane fuel tank. If you use a fuel filter between the airplane tank and the carburetor, make sure it is of adequate size to supply an unobstructed flow of fuel to the carburetor or the engine may not run correctly.

Make sure that the cowl openings on your plane provide enough airflow for proper cooling. Ideally, all of the cooling fins of the cylinder should be exposed directly to unobstructed flow of cooling air and there should be 3 times as much air exit area as intake area. Many planes have cowl openings that actually inhibit proper cooling of single cylinder engines. Their openings were made to give a scale appearance of the full size planes they are patterned after. Along with the openings described above, blocking the scale openings either partially or wholly can significantly help promote cooling air flow over the cylinder fins.

Many types of fueling devices (fuel dots, filler valves, etc.) are available for your use. Our experience has shown that often the simplest is the best. Regardless of which device you decide to use, be very wary of air leaks as they can be detrimental to the proper operation of your engine.

**NOTE:** Always use Loctite on engine mounting hardware and make sure your models firewall and engine box are adequately reinforced (pinned, soaked in thin CA, etc.).

## **IGNITION SYSTEM**

The DL50 ignition system is designed for input voltage ranging from 4.8 to 6.0 volts, no more and no less. A battery pack of 1200mah or greater may be sufficient for a day of flying for most users. Check your battery voltage with a voltage meter before every flight and do not fly if the voltage is not between 5.2 and 6.0 volts; the voltage at the start of a flight may not remain for the duration of the flight. Disconnect the battery from the ignition system while charging the battery. The ignition module should be connected to the battery through a heavy duty switch, mounted where it can be reached easily when starting the engine.

**NOTE:** A 6 volt or larger battery pack must be regulated to between 5.2 and 6.0 volts or it will supply too high a voltage to the ignition module.

The ignition module and its battery should both be "soft" mounted with 1/2in foam on all sides to avoid damage from vibration. All parts in the ignition system should be mounted no less than 12in. away from any part of the airplanes radio equipment to avoid possible interference. The shielded plug wire is wrapped in a plastic spiral covering to help protect it from damage and wear. Even so it must be inspected frequently as damage to the shielding may cause radio interference.

The spark plug that comes with the DL50 engine is an NGK CM-6 or equivalent, gapped at 0.018in. to 0.020in. Torque should be 7 to 8 ft-lbs. Be very careful not to over tighten it or damage to the cylinder threads may result. The plug cap comes with an internal grounding spring and a split retainer ring around its base; they both must be used at all times. The plug cap fits very tightly to the spark plug; you should feel a release of pressure when the cap seats properly to the plug. It will also be difficult to remove the plug cap from the plug; be sure you pull straight out on the cap and not on the plug wire. If the plug is not properly connected to the cap, damage to the module may result.

## **ENGINE BREAK IN**

Break in running should be done with regular gas mixed with a high quality petroleum based 2 cycle oil at a ratio of 30:1. The engine should be run installed in the airframe with wings attached, on the ground for 2hrs at 2500rpm, followed by 2hrs on the ground at 4000rpm. Ground running should be done with a 22X8 prop and with the cowl off to promote good cooling.


When the 4hrs of ground running is complete, the carburetor should be adjusted and the engine should be flown at light load and varying speed for enough time to have 3 gallons of gas mixed with high quality petroleum based 2 cycle oil run through it. The prop you use should allow the engine to run at 6500rpm or greater.

The oil should be switched to full synthetic 2 cycle mixed at a ratio of 45:1 after that. Note that when you switch to synthetic 2 cycle oil, it is likely that the carburetor mixture and idle speed may need to be adjusted.

## CARBURETOR ADJUSTMENT

Every engine has been adjusted to average mixture settings which will most likely allow the engine to start and run in most locations. However, as altitudes and barometric pressures vary by location and even by day, it is very likely that the carburetor mixture settings will need to be adjusted to obtain optimum performance.

**NOTE:** Never make adjustments to the carburetor while it is running. Always use a tachometer to aid in making adjustments to your carburetor.

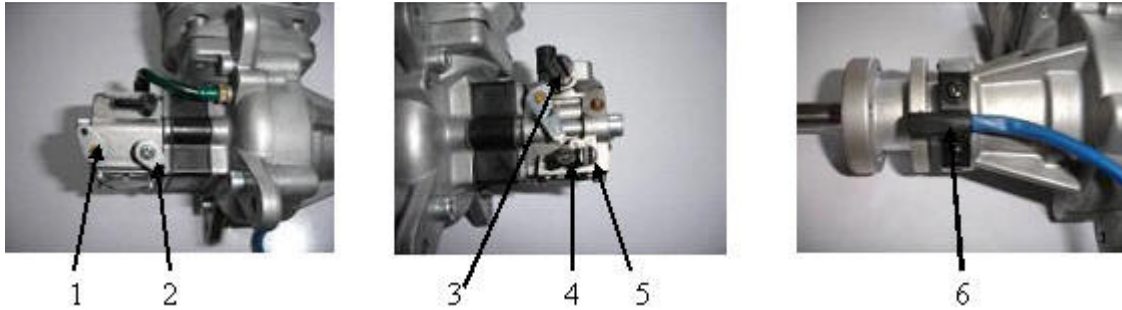

- 1 Choke Lever
- 2 Throttle Lever
- 3 Idle Speed Adjustment Screw
- 4 Low Speed Mixture Adjustment Screw
- 5 High Speed Mixture Adjustment Screw
- 6 Ignition Sensor

The Idle Adjustment Screw (See No.3) is not installed on USA model engines. The throttle servo should control idle speed as well as be able to cut the throttle to stop the engine when necessary.

The average mixture settings are 1 & 1/2 turns out for the low speed circuit (See No. 4), and 1 & 3/4 turns out for the high speed circuit (See No. 5). Carburetor mixture adjustment starts with the low speed circuit. The low speed should be set such that the transition from idle to full throttle is smooth, even if the throttle is snapped to full. This will likely result in a slightly rich idle mixture but you're better off with that than a rough transition. If the engine dies when the throttle is advanced, the mixture is likely too lean. If the engine stumbles when the throttle is advanced, the mixture is likely too rich. Since the low speed mixture has some effect on high speed mixture, always adjust the high speed after adjusting the low.

The high speed circuit is properly adjusted when the engine can reach maximum rpm while in the air, which is usually slightly richer than when its on the ground. A general rule of thumb is to richen from the maximum on the ground rpm by about 200rpm. If ever the engine slows or dies while at full throttle, the high speed mixture is likely too lean and you should adjust it as soon as possible or damage can result.

**NOTE:** Be careful not to run the mixture screws in too far as damage to the screw and / or carburetor body may result. Also, don't be tempted to run an overly rich mixture. Gas engine lubrication comes from the oil concentration in the gas, not from a rich fuel / air mixture. If you want more lubrication, you can vary the oil mix ratio. A too rich mixture will only result in poor engine performance and a fouled plug and combustion chamber.

## **STARTING THE ENGINE COLD**

Step 1: Close the choke, advance the throttle to very slightly above the idle position, turn on the ignition and briskly flip the prop through compression until the engine fires and then dies. If the gas line is dry, this may take 20 or more flips.

Step 2: Open the choke and briskly flip the prop through compression. The engine should start in just a few flips. If it acts like it wants to start but doesn't, you may need to advance the throttle slightly.

**WARM** Open the choke, advance the throttle to very slightly above the idle position, turn on the ignition and briskly flip the prop through compression. The engine should start in just a few flips. If it acts like it wants to start but doesn't, you may need to advance the throttle slightly.

**NOTE:** It is possible to flood the engine by over choking. In this case, the spark plug must be removed and dried of excess fuel. Make sure to have the ignition off when removing the spark plug.

## **ENGINE MAINTENANCE**

Fuel tubing throughout the fuel system should be changed periodically and should never allow any air to enter the system. If your gas line starts to get hard, soft or changes color, there's a good chance it needs to be replaced. Keep in mind that the tubing inside your tank deteriorates more quickly than anywhere else in the system.

The exterior of the engine should be kept clean and inspected regularly. Tucked away inside the cowl, it would be easy to miss loose nuts and bolts without frequent inspections. Dirt inside the cowl area can easily find its way into the carburetor. It should be kept clean and free of dirt build up.

The carburetor fuel screen should be cleaned periodically also. Carefully remove the pump cover (inlet side of the carburetor), gasket and pump membrane. The screen will be visible and can be cleaned after careful removal. If ever the carburetor seems to need frequent mixture adjustment or acts like it's starving for fuel, a dirty screen is a likely candidate for a cause. The carburetor should be inspected, cleaned or reconditioned with every flying season or after being stored for a long period of time.

The spark plug should be inspected, cleaned and gapped periodically and replaced if it is fouled or worn. A new plug with every new season is a worthwhile maintenance step.